



# TERMINATION INSTRUCTIONS

## Keystone Jacks 180 Degree Punchdown with KJ Termination Tool




**781934** (Cat5e White)  
**781935** (Cat6 White)  
**792381** (Cat6 Black)

- 1. Remove approximately 50mm of the cable sheath and separate the 4 pairs. For Cat 6 cables carefully cut back the central plastic separator flush with the cable sheath.
- 2. Present the cable at 90° to the rear of the jack and dress the wires in to the appropriate coloured IDC slots following the preferred wiring configuration.

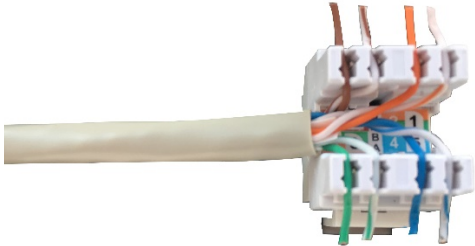
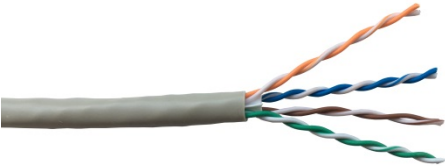


- 3. Load the keystone jack in to the KJ termination tool.
- 4. Fully squeeze together the handles of the KJ termination tool so that the excess wire is trimmed.

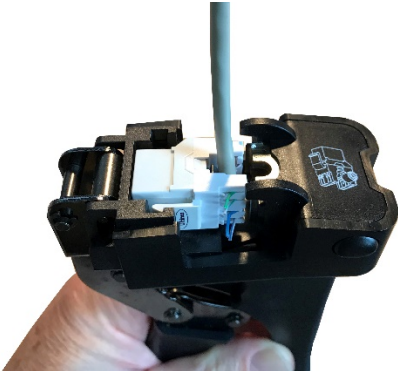

## Keystone Jacks 180 Degree Punchdown with KJ Termination Tool

5. Remove the jack from the KJ termination tool. Rotate the cable through 90° so that it is perpendicular to the jack.
6. Fit the wire retention cap.

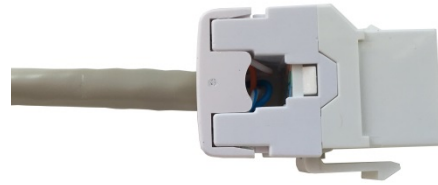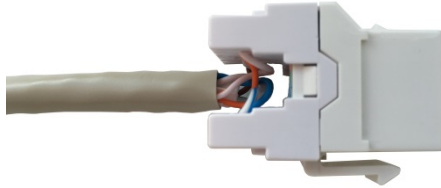

### Recommended Tools

Part Number	Description	Purpose
994080	Side Cutters - 160mm	Cutting cable to length
823605	Cyclops Stripper	Cutting sheath
809585	Mini Flush Cutters	Trimming cable tie
826163	KJ Termination Tool	Terminating and trimming wires