

# TERMINATION INSTRUCTIONS



## Keystone Jacks 90 Degree Punchdown with KJ Termination Tool





**789768** (Cat5e White)


**789769** (Cat6 White)

**792379** (Cat6 Black)

1. Remove approximately 50mm of the cable sheath and separate the 4 pairs. For Cat 6 cables carefully cut back the central plastic separator flush with the cable sheath.
2. Present the cable at the rear of the jack and dress the wires in to the appropriate coloured IDC slots following the preferred wiring configuration.

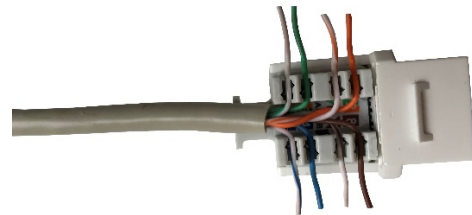
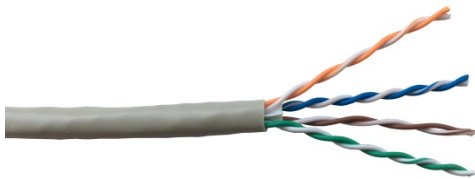


3. Load the jack vertically in to the KJ termination tool.
4. Fully squeeze together the handles of the KJ termination tool so that the excess wire is trimmed.

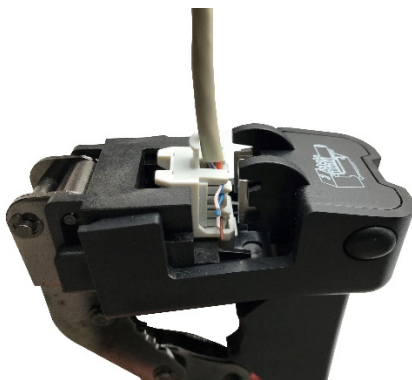

## Keystone Jacks 90 Degree Punchdown

5. Remove the jack from the KJ termination tool and fit the wire retention cap.
6. Secure the cable to the strain relief flange using a cable tie, taking care not to over tighten it.

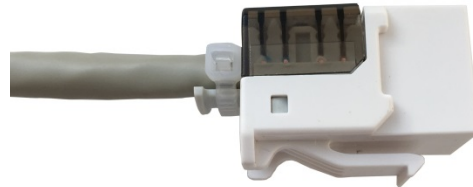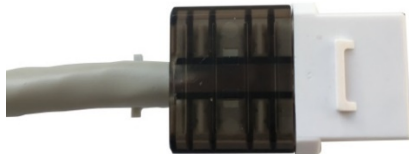

### Recommended Tools

Part Number	Description	Purpose
994080	Side Cutters - 160mm	Cutting cable to length
823605	Cyclops Stripper	Cutting sheath
809585	Mini Flush Cutters	Trimming cable tie
826163	KJ Termination Tool	Terminating and trimming wires