

## Keystone Jacks 90 Degree Toolless





**790013** (Cat5e White)



**790014** (Cat6 White)

**792380** (Cat6 Black)

1. Remove approximately 50mm of the cable sheath and separate the 4 pairs. For Cat 6 cables carefully cut back the central plastic separator flush with the cable sheath.
2. Dress the wires in to the appropriate coloured slots on the jack following the preferred wiring configuration.

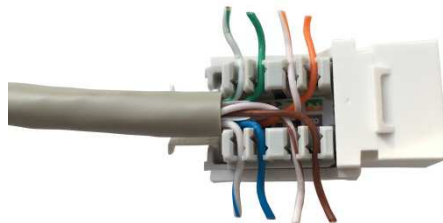
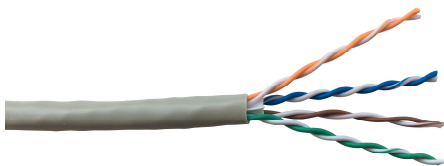


3. Cut the wires flush with the outside edge of the jack termination blocks.
4. Fit the wire termination cap over the wires and press down to seat wires.

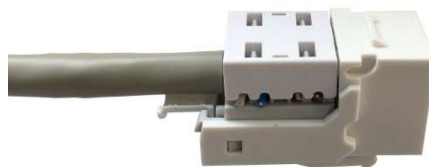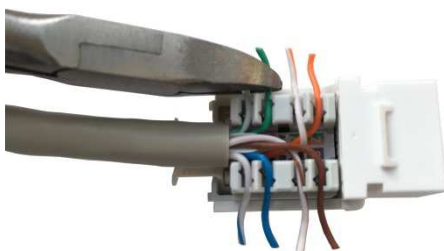

## Keystone Jacks 90 Degree Toolless

5. Locate the top cover in to the curved slots on the keystone jack body.
6. Close the rear cover of the jack.

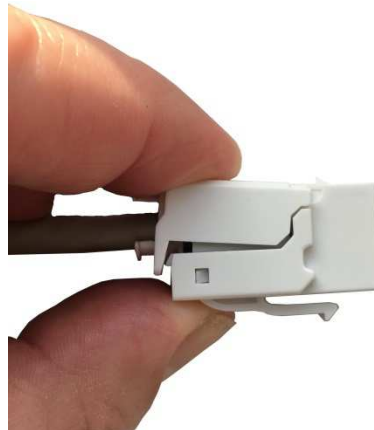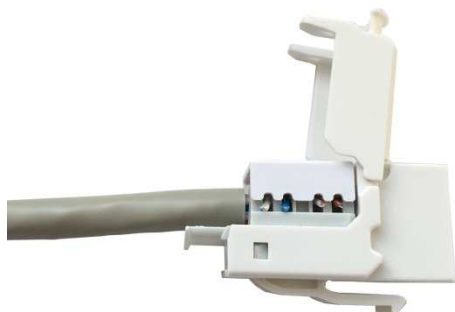

7. It should lock closed with an audible 'click'.
8. Secure the cable to the anchor point on the rear of the jack using the cable tie supplied taking care not to over tighten.



### Recommended Tools

Part Number	Description	Purpose
786575	Side Cutters - 145mm	Cutting cable to length
993874	Cyclops Stripper	Cutting sheath
785404	Electronic Flush Cutters	Cutting cable central plastic separator, trimming wires and cable tie