



Standard Modules





778649 (Cat 5e)

791329 (Cat 6)

1. Remove approximately 50mm of the cable sheath and separate the 4 pairs. For Cat 6 cables carefully cut back the central plastic separator flush with the cable sheath.
2. Place the cable so that the sheath end is close to the centre of the IDC contacts.

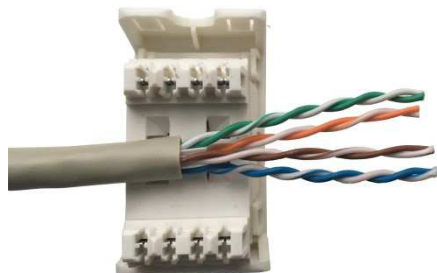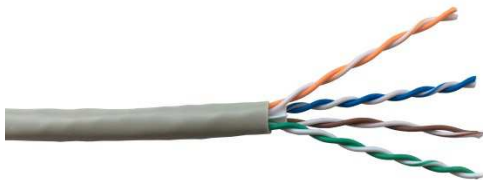


3. Dress the wires in to the appropriate coloured IDC slots. Ensure that the cable pair twists are maintained as close as possible to the point of termination.
4. Punch down the wires using a Krone type or 110 style termination tool.

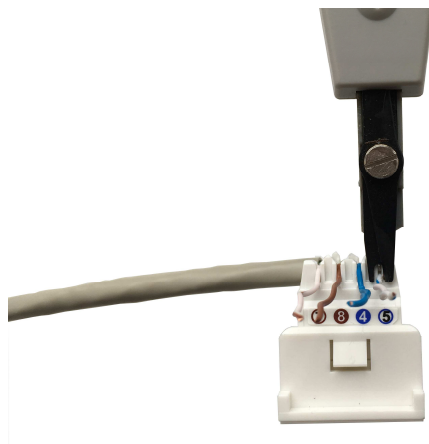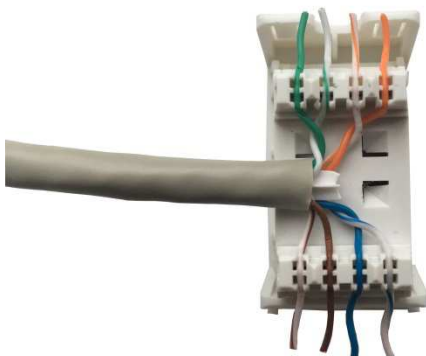

Standard Modules

- When all of the wires have been terminated secure the cable to the strain relief slots using a cable tie, taking care not to over tighten it.

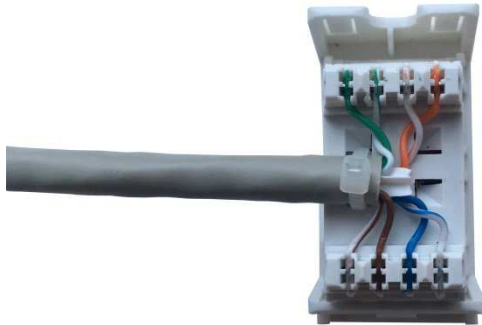

Recommended Tools

Part Number	Description	Purpose
786575	Side Cutters - 145mm	Cutting cable to length & trimming cable tie
993874	Cyclops Stripper	Cutting sheath
770218	Inserter Wire 110	Terminating and trimming wires
773118	Inserter Wire 2A	Terminating and trimming wires